1 Front View

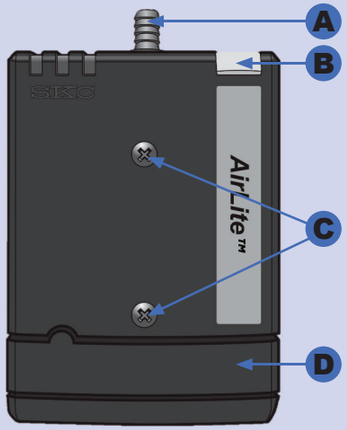

A. Inlet
B. Protective control cover
C. Accessory mounting screws
D. Battery compartment

2 Top View

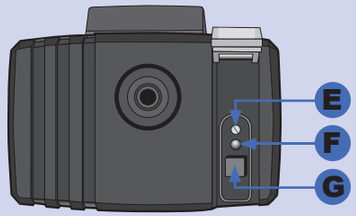

E. Flow adjustment screw
F. LED indicator
G. On/off button

3 Installing the Batteries

Loosen screw on bottom of case.

Open and remove compartment door.

Insert three AA-size batteries.

Insert hinge of compartment door under lip of case.

Close door.

Tighten screw on bottom of case.

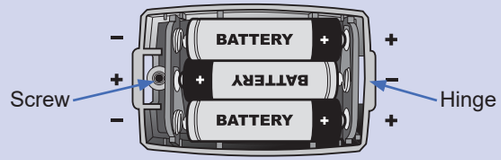

4 Running the Pump

Turn on pump by pressing on/off button.

Adjust flow using small slotted screwdriver to turn flow adjustment screw.

Determine pump status by observing LED indicator.

5 Reading the LED Indicator

The LED on top of pump case indicates pump and battery status.

Slow flash — Normal run

Fast flash — Flow fault

Double flash — Low battery, approximately one hour operation remaining

Flash every eight seconds — Pump shutdown due to exhausted batteries

Four flashes every six seconds — Pump shutdown due to flow fault

NOTE: Indication of pump shutdown due to exhausted batteries will override all other indicators.

6 Registering the Pump

Registering the AirLite Pump is as easy as going to the SKC website. Registering your pump provides the added benefits of the latest product information and free technical support.

Cautions

- Do not operate pump in hazardous locations. Pump is **not** UL Listed for intrinsic safety.
- To prevent corrosion of battery terminals, remove batteries when AirLite will not be used for an extended time.
- Failure to follow warnings and cautions voids any warranty.

NOTE: If using rechargeable AA-size 1.2-volt NiMH batteries, run time will be approximately half that stated for disposable batteries.

FREE Technical Support

Rely on SKC Tech Support for the answers you need. Our experts are ready to help!

Email: skctech@skcinc.com

Ordering Accessories

Accessories	Cat. No.
Filter Cassette Holder, accommodates two or three-piece 25 or 37-mm cassettes with or without a cyclone, clips to a worker's collar	**225-1**
Low Flow Adapter Kit (5 to 500 ml/min) includes All-in-One low flow holder and Type A tube cover	**110-500**
Protective Nylon Pump Pouch, black, with belt loop	**224-902**
Medium Flow chek-mate Flowmeter, 0.5 to 5 L/min, includes 9-volt battery, available with NIST, UK, or ISO standard traceable calibration certificate	**375-0550 Series**
Replacement Part	
Battery Case Cover	**P20184**

Call SKC at 724-941-9701 (800-752-8472 [U.S.])
to place your order today.

Order online at www.skcinc.com.

SKC Limited Warranty and Return Policy

SKC products are subject to the SKC Limited Warranty and Return Policy, which provides SKC's sole liability and the buyer's exclusive remedy. To view the complete SKC Limited Warranty and Return Policy, go to www.skcinc.com/warranty-information.

SCIENCE. SERVING PEOPLE.™

Form 38020 Rev 260831

SKC

AirLite™

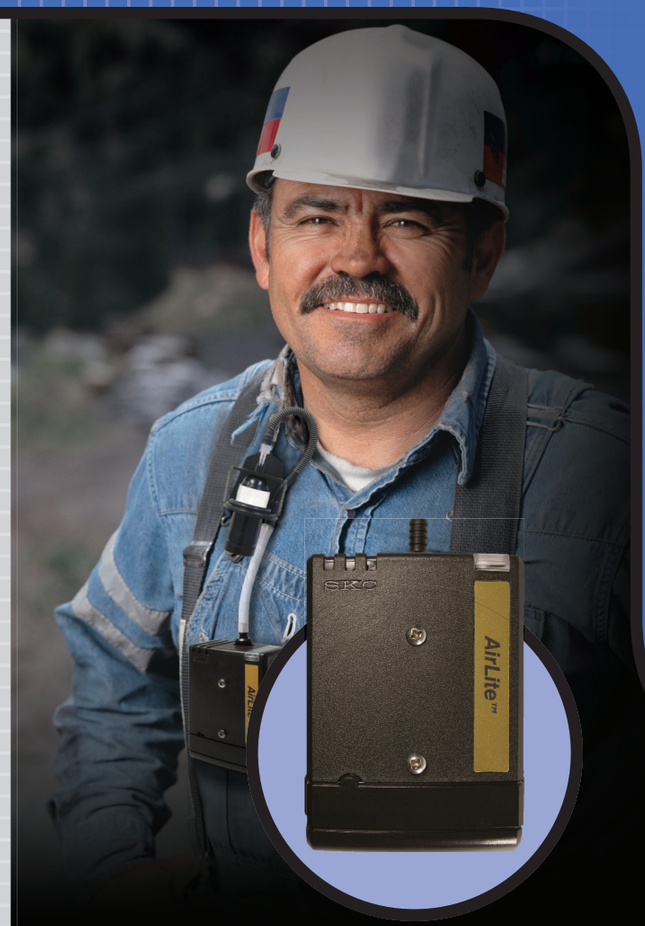

Start-up Guide

Congratulations on the purchase of the AirLite Sample Pump — only from SKC.

For complete pump operating instructions, visit www.skcinc.com and search on this product.