


Identifying Pump Parts



- A. Protective screen cover
- B. Color resistive touch screen/display
- C. Pump inlet
- D. Inlet housing/filter
- E. Pump status LED indicators
- F. Charging cradle
- G. Belt clip (back of pump)
- H. Battery pack
- I. Charging contacts
- J. Screws securing battery (2)
- K. On/Off button

Charging the Battery

Set up charging train and completely charge battery pack before operating pump! **Battery recharge time:** Approximately 3 hours

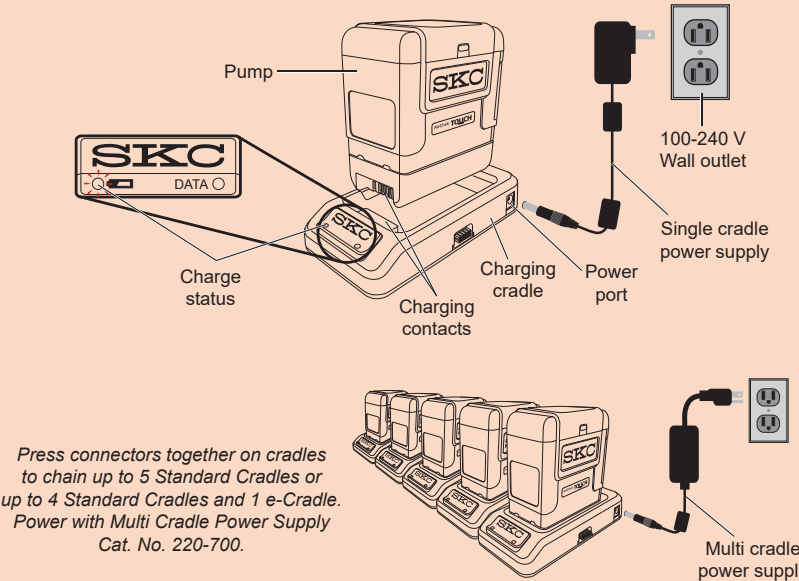

Press connectors together on cradles to chain up to 5 Standard Cradles or up to 4 Standard Cradles and 1 e-Cradle. Power with Multi Cradle Power Supply Cat. No. 220-700.

User may replace external components such as the inlet filter, battery, protective screen cover, and/or belt clip. Service must be done by SKC to maintain performance and IS rating. Warranty is void if pumping compartment is opened by user.

Reading Charge Status on Cradle LED

The left LED on the charging cradle indicates battery charge status. Observe LED steadily for > 5 seconds.

LED Action			Charge Status
	Red		Charge in progress
	● steady		
Red 3 sec	Green 1 sec	(Pattern repeats)	Approximately 75% charged
	Green steady		Charge completed/trickle charge


Operating the Pump

Turning Pump Power On/Off

Press and hold briefly the recessed power button on side of pump [K].

Using the Touch Screen [B]

Lift cover [A] and use fingertip or fingernail tip to gently tap screen to set up and operate pump.

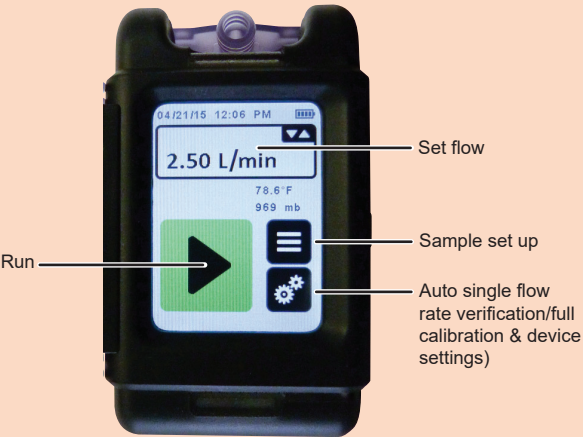

Determining Pump Status

AirChek TOUCH features status LEDs that bracket the touch screen on the pump.w

Green, flashing = Pump or schedule running
Red, flashing = Flow fault

Notes:

- A running pump will display a small lock icon. Touching the small lock icon will lock the screen (large lock icon will display). This feature prevents the pump from being stopped by accidental touches. **To unlock the screen, touch the large lock icon and enter 1 2 3 4 as prompted at the top of the screen.**
- A non-running pump will power off automatically after 5 minutes of inactivity.

Cautions

See Installation/Operating Caution Guide supplied with sample pump.

User may replace external components such as the inlet filter, battery, protective screen cover, and/or belt clip. Service must be done by SKC to maintain performance and IS rating. Warranty is void if pumping compartment is opened by user.

Registering the Pump

Registering the AirChek TOUCH Pump is as easy as going to the SKC website. Registering your pump provides the added benefits of the latest product information and free technical support.



www.skccinc.com/product-registration

FREE Technical Support

Rely on SKC Tech Support for the answers you need. Our experts are ready to help!

Email: skctech@skccinc.com

Ordering Accessories

Accessories	Cat. No.
Standard Charging Cradle, <i>requires power supply, see below</i>	220-800
Enhanced Charging Cradle (e-Cradle), includes USB cable, <i>requires power supply, see below</i>	220-900
Single Cradle Power Supply, for use with one charging cradle 100-240 V	220-600
Multi Cradle Power Supply, for use with 2 to 5 charging cradles 100-240 V	220-700
Replacement Battery Pack, Li-Ion*	P75718A
DataTrac Pro for AirChek TOUCH Hardware Accessory Kit includes e-Cradle, single power supply, and USB cable for connection to PC, <i>required for free download/use of DataTrac Pro for AirChek TOUCH Software</i>	877-93
Medium Flow chek-mate Flowmeter, 0.5 to 5 L/min, includes 9-volt battery, available with NIST, UK, or ISO standard traceable calibration certificate	375-0550 Series

* Li-Ion batteries are subject to special shipping regulations.

Call SKC at 724-941-9701 (800-752-8472 [U.S.])
to place your order today.

Order online at www.skccinc.com.

SKC Limited Warranty and Return Policy

SKC products are subject to the SKC Limited Warranty and Return Policy, which provides SKC's sole liability and the buyer's exclusive remedy. To view the complete SKC Limited Warranty and Return Policy, go to www.skccinc.com/warranty-information.



SCIENCE. SERVING PEOPLE.®



Start-up Guide

Congratulations on your purchase of the
SKC AirChek TOUCH Sample Pump — only from SKC.

For complete pump operating instructions, visit
the Knowledge Center at www.skccinc.com.