




Operating Instructions

863 Valley View Road, Eighty Four, PA 15330
724-941-9701 • skcinc.com

ULTRA Passive Samplers without Blank Cat. Nos. 690-101-NB, -103-NB, -104-NB, and -106-NB

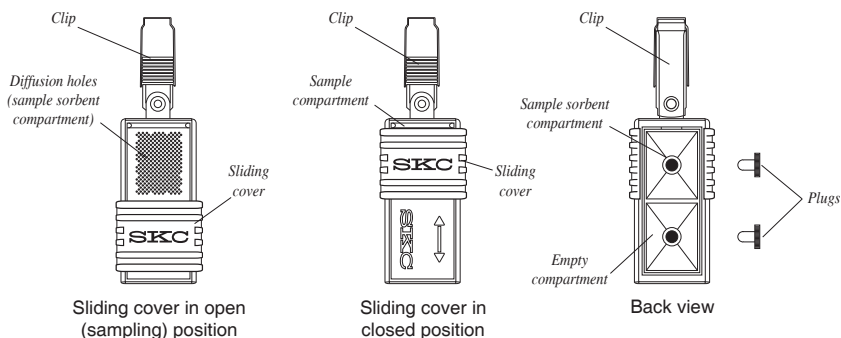

Applications

SKC patented* ULTRA® Passive Samplers provide for low ppb to ppt detection of organic vapors in ambient and indoor air.

Performance Profile

Sampling Rates: Go to the SKC Passive Sampling Guide at www.skcinc.com.


Analysis: Thermal desorption (TD); gas chromatography (GC)
See Analysis Instructions in the Knowledge Center at www.skcinc.com.

Shelf-life: Limited; check expiration date on packaging.
Store at $\leq 39.2^{\circ}\text{F}$ (4°C).


* U.S. Patent No. 6,607,581

Sampling

1. Open the pouch. Remove the sampler.
 - a. Do not discard the pouch.
 - b. Store the pouch in a clean, organic solvent-free environment.


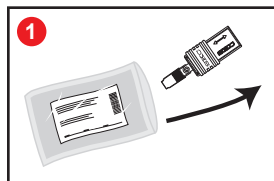


2. Record the following:
 - a. **Sample ID** on the pouch and sampler ID label
 - b. **Sampling location** on the pouch
 - c. **Date sample taken** on the pouch

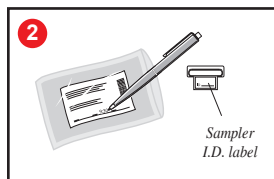


❗ **Do not use Sharpie® markers or equivalent to mark the label or pouch as these can off-gas VOCs.**

3. Clip the sampler(s) in an appropriate location.
 - a. **Indoors:** Clip the sampler(s) to a stand accessory (Cat. No. 690-302) and locate at an appropriate height.
 - b. **Outdoors:** Clip the sampler(s) inside the shelter (open on two ends and bottom to allow air to flow freely). Hang the shelter securely at the appropriate height.

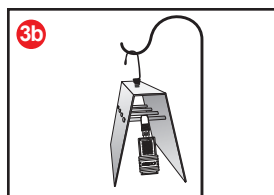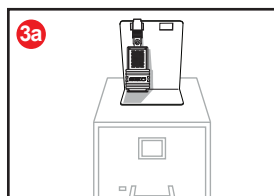


❗ **Ensure the diffusion holes in the sampler are not obstructed in any way.**

4. Start sampling: Slide the sampler cover to the open position (diffusion holes visible). Write the sample start time on the pouch label.

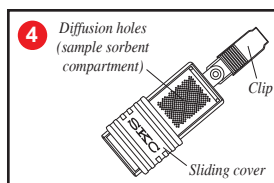


5. Stop sampling: Slide the sampler cover to the closed position (arrow and SKC visible). Write the sample stop time on the pouch label.

Important: Measure and record ambient temperature and atmospheric pressure. Include in information sent to the laboratory.

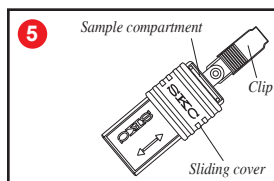


6. Place the sampler in its resealable pouch **immediately** after sampling.

❗ **Ensure the sample ID on the sampler matches the sample ID on the pouch.**

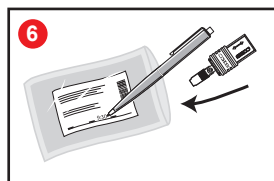

7. Seal the pouch(es). Place the pouch(es) in a container with a cool pack.
8. Use expedited shipping to send the sample(s), pertinent information, and Chain of Custody form(s) to a laboratory for analysis.

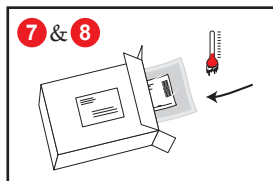

Storage

Before Sampling: Up to 30 days at ≤ 39.2 F (4 C) in a clean, organic solvent-free environment

After Sampling: 21 days at ≤ 39.2 F (4 C) in a clean, organic solvent-free environment

Ordering

ULTRA Passive Samplers, pk/5, prefilled with:	Cat. No.
Anasorb® GCB1, # 370 mg	690-101-NB
Chromosorb® 106, # 285 mg	690-103-NB
Tenax® TA, # 253 mg	690-104-NB
Carbopack X, 400 mg	690-106-NB

Limited shelf-life; see Storage above

‡ Comparable to Carbopack B

¥ Go to www.osha.gov and search on ULTRA for additional information on sampling rates for Chromosorb 106.

Sampling Accessories

Stand for Indoor Sampling	690-302
Shelter for Outdoor Sampling	690-303

Analysis Accessory

Thermal Desorption Tube, Perkin Elmer, 0.25-inch OD x 3.5-inch length, includes screens and end caps, ea	P226530
--	---------

SKC Limited Warranty and Return Policy

SKC products are subject to the SKC Limited Warranty and Return Policy, which provides SKC's sole liability and the buyer's exclusive remedy. To view the complete SKC Limited Warranty and Return Policy, go to skcinc.com/warranty.

